

# STANDARD ADAPTER CROSS REFERENCE

To use this chart, locate one end of the adapter in the left or right hand column and the other end along the top or bottom. Find adapter part number where the two intersect. Either refer to the adapter pages for either end or go to the index for an exact page number. If you have adapter requirements not found here, we can fill your needs through our special order program. Contact your distributor.

M = MALE, F = FEMALE

Cross Ref

TYPE	3.5-F	3.5-M	BNC-F	BNC-M	BNC-F 75 OHM	BNC-M 75 OHM	7/16 DIN-F	7/16 DIN-M	F-F	F-M	FME-F	FME-M	MHV-F	MHV-M	MMCX- JACK	TYPE
3.5-F	RFB35F-35F-00000	RFB35M-35F-00000 RFB35M-35F-15000														3.5-F
3.5-M	RFB35M-35F-00000 RFB35M-35F-15000	RFB35M-35M-00000 RFB35M-35M-60000														3.5-M
BNC-F			RFB-1131 RFB-1134 RFB-1135 RFB-1135-1 RFB-1135-1 RFB-1162	RFB-1130 RFB-1130-1 RFB-1130-2 RFB-1130-3 RFB-1130-5 RFB-1132 RFB-1138					RFB-1153	RFB-1144	RFE-6150	RFE-6101				BNC-F
BNC-M			RFB-1130 RFB-1130-1 RFB-1130-2 RFB-1130-3 RFB-1130-5 RFB-1132	RFB-1133					RFB-1155		RFE-6151	RFE-6102 RFE-6103				BNC-M
BNC-F 75 OHM					RFB-1734 RFB-1735 RFB-1735-1	RFB-1730 RFB-1730-3 RFB-1730-4 RFB-1732 RFB-1738			RFB-1753							BNC-F 75 OHM
BNC-M 75 OHM					RFB-1730 RFB-1730-3 RFB-1730-4 RFB-1732 RFB-1738	RFB-1733										BNC-M 75 OHM
7/16 DIN-F							RFD-1653-2 RFD-1650-2	RFD-1652-2 RFD-1660-2								7/16 DIN-F
7/16 DIN-M							RFD-1652-2 RFD-1660-2	RFD-1650-2 RFD-1651-2								7/16 DIN-M
F-F			RFB-1153	RFB-1155	RFB-1753					RFF-1445-5 RFF-1446-10						F-F
F-M			RFB-1144						RFF-1445-5 RFF-1446-10	RFF-1448						F-M
FME-F			RFE-6150	RFE-6151												FME-F
FME-M			RFE-6101	RFE-6102 RFE-6103								RFE-6100				FME-M
MHV-F													RHV-134	RHV-130		MHV-F
MHV-M													RHV-130			MHV-M
MMCX JACK																MMCX JACK
MMCX PLUG															BMX-9405-1	MMCX PLUG
MOTO- ROLA PHONO			RFB-1141													MOTO- ROLA PHONO
MUHF-F				RFB-627							RFE-6152	RFE-6104				MUHF-F
MUHF- M			RFB-622								RFE-6153	RFE-6105				MUHF- M
N-F			RFB-1023-5 RFB-1030-1	RFB-1030-1			RFD-1673-2	RFD-1671-2								N-F
N-M			RFB-1037-1	RFB-1040-1			RFD-1672-2	RFD-1670-2				RFE-6107				N-M
RCA-F			RFB-1151	RFB-1139												RCA-F
RCA-M			RFB-1140 RFB-1152		RFB-1752											RCA-M
SMA-F			RFB-1142 RSA-3413	RSA-3476 RSA-3476-1							RFE-6110					SMA-F
SMA-M			RSA-3458	RSA-3459							RFE-6111	RSA-3494				SMA-M
SMB- JACK																SMB- JACK
TNC-F			RFF-1232	RFF-1230							RFF-1240 RFF-1240-1					TNC-F
TNC-M			RFF-1231								RFE-6155	RFE-6108 RFE-6109				TNC-M
UHF-F			RFB-545	RFB-1136												UHF-F
UHF-M			RFB-1137									RFE-6112				UHF-M
TYPE	3.5-F	3.5-M	BNC-F	BNC-M	BNC-F 75 OHM	BNC-M 75 OHM	7/16 DIN-F	7/16 DIN-M	F-F	F-M	FME-F	FME-M	MHV-F	MHV-M	MMCX- JACK	TYPE



Note: Chart does not run straight across both pages

TYPE	MMCX-PLUG	MOTOROLA PHONO	MUHF-F	MUHF-M	N-F	N-M	RCA-F	RCA-M	SMA-F	SMA-M	SMB-JACK	TNC-F	TNC-M	UHF-F	UHF-M	TYPE
3.5-F																3.5-F
3.5-M																3.5-M
BNC-F		RFB-1141	RFB-622	RFB-1023-5 RFB-1039-1	RFB-1037-1	RFB-1151	RFB-1140 RFB-1152	RFB-1142 RSA-3413 RSA-3413-3	RSA-3458			RFT-1232	RFT-1231	RFB-645	RFB-1137	BNC-F
BNC-M			RFB-627	RFB-1038-1	RFB-1040-1	RFB-1139		RSA-3476 RSA-3476-1	RSA-3459			RFT-1230		RFB-1136		BNC-M
BNC-F 75 OHM							RFB-1752									BNC-F 75 OHM
BNC-M 75 OHM																BNC-M 75 OHM
7/16 DIN-F					RFB-1673-2	RFB-1672-2										7/16 DIN-F
7/16 DIN-M					RFB-1671-2	RFB-1670-2										7/16 DIN-M
F-F																F-F
F-M																F-M
FME-F			RFE-6152	RFE-6153								RFT-1240 RFT-1240-1	RFE-6155			FME-F
FME-M			RFE-6104	RFE-6105		RFE-6107			RFE-6110	RFA-6111			RFE-6108 RFE-6109		RFE-6112	FME-M
MHV-F										RSA-3494						MHV-F
MHV-M																MHV-M
MMCX-JACK	BMX-9405-1															MMCX-JACK
MMCX-PLUG									RSA-3408-1							MMCX-PLUG
MOTOROLA PHONO																MOTOROLA PHONO
MUHF-F			RFB-629 RFB-632	RFB-630 RFB-630-1 RFB-630-6 RFB-630-7 RFB-630-8 RFB-631 RFB-643		RFB-625 RFB-625-03			RSA-3471	RSA-3450				RFB-628	RFB-626	MUHF-F
MUHF-M			RFB-630 RFB-630-1 RFB-630-6 RFB-630-7 RFB-630-8 RFB-631 RFB-643	RFB-624	RFB-620				RSA-3470	RSA-3451		RFB-623 RFB-623-5 RFB-633		RFB-621	RFB-645	MUHF-M
N-F				RFB-620	RFB-1011-1 RFB-1013-1 RFB-1023	RFB-1010-1 RFB-1012-1 RFB-1017			RSA-3290 RSA-3290-10 RSA-3412 RSA-3477 RSA-3477-03	RSA-3452		RFT-1239	RFT-1234 RFT-1234-11	RFB-1034-1	RFB-1036-1	N-F
N-M			RFB-625 RFB-625-03		RFB-1010-1 RFB-1012-1 RFB-1017	RFB-1014-1			RSA-3478	RSA-3453		RFT-1233		RFB-1035-1		N-M
RCA-F							RCA-1850-03						RFT-1237			RCA-F
RCA-M												RFT-1238				RCA-M
SMA-F	RSA-3408-1		RSA-3471	RSA-3470	RSA-3290 RSA-3290-10 RSA-3412 RSA-3477 RSA-3477-03	RSA-3478			RSA-3401 RSA-3404 RSA-3410 RSA-3410-1	RIS-2028 RSA-3400 RSA-3400-1 RSA-3402 RSA-3402-1 RSA-3405 RSA-3405-1	RSA-3406 RSA-3406-1	RSA-3473	RSA-3472	RSA-3475	RSA-3474	SMA-F
SMA-M			RSA-3450	RSA-3451	RSA-3452	RSA-3453			RIS-2028 RSA-3400 RSA-3400-1 RSA-3402 RSA-3402-1 RSA-3405 RSA-3405-1	RSA-3403 RSA-3403-1		RFT-1241-6	RSA-3454	RSA-3457	RSA-3456	SMA-M
SMB-JACK									RSA-3406 RSA-3406-1							SMB-JACK
TNC-F			RFB-623 RFB-623-5 RFB-633		RFT-1238	RFT-1233		RFT-1238	RSA-3473	RFT-1241-6		RFT-1225 RFT-1226 RFT-1229	RFT-1227 RFT-1228 RFT-1242		RFT-1236	TNC-F
TNC-M			RFB-628		RFT-1234 RFT-1234-11		RFT-1237		RSA-3472	RSA-3454		RFT-1227 RFT-1228 RFT-1242	RFT-1224	RFT-1235		TNC-M
UHF-F				RFB-621	RFB-1034-1	RFB-1035-1			RSA-3475	RSA-3457			RFT-1235	RFB-534 RFB-536 RFB-537 RFB-537-50	RFB-532 RFB-533	UHF-F
UHF-M			RFB-626	RFB-645	RFB-1036-1				RSA-3474	RSA-3456		RFT-1236		RFB-532 RFB-533	RFB-538	UHF-M
TYPE	MMCX-PLUG	MOTOROLA PHONO	MUHF-F	MUHF-M	N-F	N-M	RCA-F	RCA-M	SMA-F	SMA-M	SMB-JACK	TNC-F	TNC-M	UHF-F	UHF-M	TYPE

Cross Ref

 Find adapters for WiFi and broadband on next page. 



7610 Miramar Road, San Diego, CA 92126 • (858) 549-6340 • (800) 233-1728  
 fax: (858) 549-6345 • email: [rfi@rfindustries.com](mailto:rfi@rfindustries.com) • web: [www.rfindustries.com](http://www.rfindustries.com)

# WIFI AND BROADBAND CROSS REFERENCE (FCC Part 15 Unique Adapters)

To use this chart, locate one end of the adapter in the left or right hand column and the other end along the top or bottom. Find adapter part number where the two intersect. Either refer to the adapter pages for either end or go to the index for an exact page number. If you have adapter requirements not found here, we can fill your needs through our special order program. Contact your distributor.

M = MALE, F = FEMALE, REV POL = REVERSE POLARITY

Cross Ref

TYPE	BNC-F	MMCX PLUG	N-F	N-F REV POL	N-M	N-M REV POL	SMA-F	SMA-F REV POL	SMA-M REV POL	SMA-F REV THREAD	TNC-F	TNC-M REV POL	TNC-F REV THREAD	TNC-M REV THREAD	TYPE
BNC-F										RI-1142					BNC-F
MMCX PLUG								RP-3408-1							MMCX PLUG
N-F						RP-1016			RP-3452			RP-1234			N-F
N-F REV POL					RP-1015										N-F REV POL
N-M				RP-1015					RP-3453						N-M
N-M REV POL			RP-1016												N-M REV POL
SMA-F									RP-3405 RP-3405-1						SMA-F
SMA-F REV POL		RP-3408-1													SMA-F REV POLARITY
SMA-M REV POL			RP-3452		RP-3453		RP-3405 RP-3405-1								SMA-M REV POL
SMA-F REV THREAD	RI-1142														SMA-F REV THREAD
TNC-F												RP-1223			TNC-F
TNC-F REV POL															TNC-F REV POL
TNC-M REV POL			RP-1234									RP-1223			TNC-M REV POL
TNC-F REV THREAD													RI-1226	RT-1227	TNC-F REV THREAD
TNC-M REV THREAD													RI-1227		TNC-M REV THREAD
TYPE	BNC-F	MMCX PLUG	N-F	N-F REV POL	N-M	N-M REV POL	SMA-F	SMA-F REV POL	SMA-M REV POL	SMA-F REV THREAD	TNC-F	TNC-M REV POL	TNC-F REV THREAD	TNC-M REV THREAD	TYPE

 Find standard adapters on previous page.

