


## EASILY TEST YOUR CABLES TO SAVE DIAGNOSTIC TIME

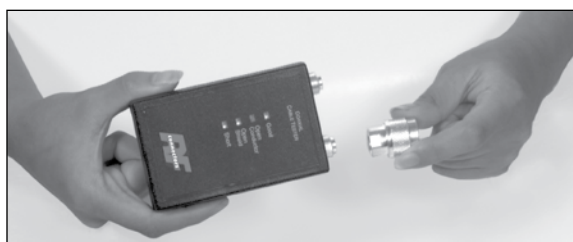

UNIDAPT™ WIFI COAX  
AND CAT 5 TESTING KIT  
RFA-4028-WIFI

UNIDAPT™ WIFI  
TESTING KIT  
RFA-4018-WIFI



### CONTENTS OF Unidapt™ TESTING KITS

DESCRIPTION (INTERFACE TO UNIDAPT™ INTERFACE)	UNIDAPT™ TESTING KIT RFA-4018	UNIDAPT™ WIFI TESTING KIT RFA-4018-WIFI	UNIDAPT™ COAX & CAT 5 TESTING KIT RFA-4028	UNIDAPT™ COAX & CAT 5 WIFI TESTING KIT RFA-4028-WIFI	PART NUMBER
UNIVERSAL ADAPTERS	6	6	6	6	PT-4000-013
BNC MALE	2	1	2	1	PT-4000-004
BNC FEMALE	2	1	2	1	PT-4000-010
N MALE	2	2	2	2	PT-4000-003
N FEMALE	2	2	2	2	PT-4000-009
SMA MALE	2	2	2	2	PT-4000-006
SMA FEMALE	2	2	2	2	PT-4000-012
TNC MALE	2	2	2	2	PT-4000-005
TNC FEMALE	2	2	2	2	PT-4000-011
UHF MALE	2		2		PT-4000-001
UHF FEMALE	2		2		PT-4000-007
MINI-UHF MALE	2		2		PT-4000-002
MINI-UHF FEMALE	2		2		PT-4000-008
MMCX MALE		1		1	PT-4000-117
MMCX FEMALE		1		1	PT-4000-118
RP-SMA MALE		2		2	PT-4000-133
RP-SMA FEMALE		2		2	PT-4000-134
RP-TNC MALE		2		2	PT-4000-135
RP-TNC FEMALE		2		2	PT-4000-136
UNIDAPT™ CABLE TESTER	1	1	1	1	RFA-4018-20
CAT 5 CABLE TESTER			1	1	RFA-4218-20

### Unidapt™ Cable Tester (RFA-4018-20) Features

- Powered by a 9-volt battery.
- Lightweight, small & completely portable.
- LED panel on front of tester indicates Pass or Fail.
- If Fail, panel saves valuable diagnostic time by indicating whether due to Short, Open Conductor or Open Shield.

### Using Cable Tester


- To **Test free cables**, attach each end of cable assembly to tester.
- Cable condition will be indicated on LED panel.
- Test **Installed cables** with two Coaxial Cable Testers.
- Disconnect cable from all equipment and attach remote cable end to right jack of one tester. Attach the local cable end to left jack of local tester.
- Cable status will be displayed on LED panel of local tester.



# Unidapt™ Cable Testing Kits


KITS: Unidapt™ Universal Adapter System

**Unidapt™ Testing Kit:**




Unidapt™ Testing Kit RFA-4018

=



UNIDAPT™ CABLE TESTER

+



Classic Kit RFA-4024

page 106

**Unidapt™ WiFi Testing Kit:**



Unidapt™ WiFi Testing Kit RFA-4018-WIFI

=



UNIDAPT™ CABLE TESTER

+



Classic WiFi Kit RFA-4024-WIFI

page 106

**Unidapt™ Coax & Cat 5 Testing Kit:**



Unidapt™ Coax & Cat 5 Testing Kit RFA-4028

=



Unidapt™ Cable Tester

+



Cat 5 Cable Tester

+



Classic Kit RFA-4024

page 101

page 106

Read about our Cat 5 cable tester on page 101

Our coaxial cable tester with BNC adapters is shown on page 121

**Unidapt™ WiFi Coax & Cat 5 Test Kit:**



Unidapt™ WiFi Coax & Cat 5 Test Kit RFA-4028-WIFI

=



Unidapt™ Cable Tester

+



Cat 5 Cable Tester

+



Classic WiFi Kit RFA-4024-WIFI

page 101

page 106

KITS

KITS

INDIVIDUAL ADAPTERS ARE SHOWN AT 65% ACTUAL SIZE.

See complete list of Unidapt™ adapters on page 117

The Key!



UNIVERSAL CENTER ADAPTER PT-4000-013



BNC MALE PT-4000-004



BNC FEMALE PT-4000-010



N MALE PT-4000-003



N FEMALE PT-4000-009



SMA MALE PT-4000-006



SMA FEMALE PT-4000-012



TNC MALE PT-4000-005



TNC FEMALE PT-4000-011



UHF MALE PT-4000-001



UHF FEMALE PT-4000-007



MINI-UHF MALE PT-4000-002



MINI-UHF FEMALE PT-4000-008



MMCX MALE PT-4000-117



MMCX FEMALE PT-4000-118



RP SMA MALE PT-4000-133



RP SMA FEMALE PT-4000-134



RP TNC MALE PT-4000-135



RP TNC FEMALE PT-4000-136



7610 Miramar Road, San Diego, CA 92126 • (858)549-6340 • (800) 233-1728  
 fax: (858)549-6345 • email: [rfi@rfindustries.com](mailto:rfi@rfindustries.com) • web: [www.rfindustries.com](http://www.rfindustries.com)