
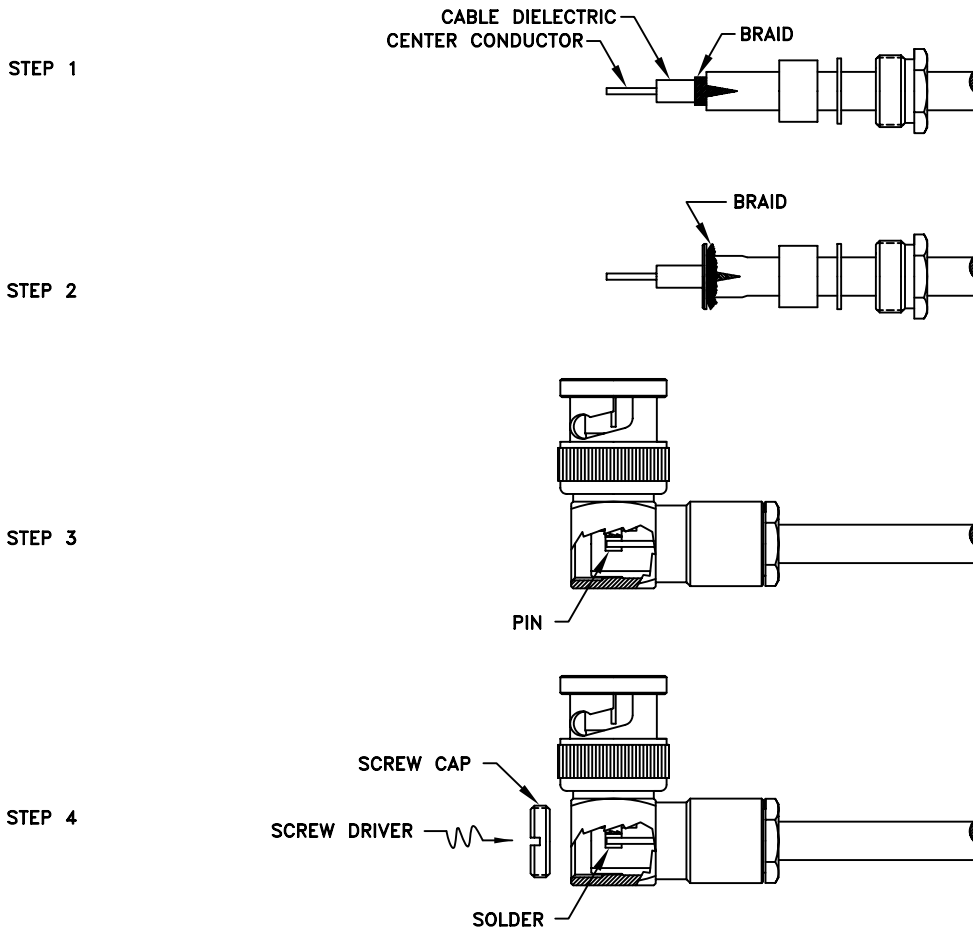


# CABLE ASSEMBLY INSTRUCTIONS

RFB-1709-D

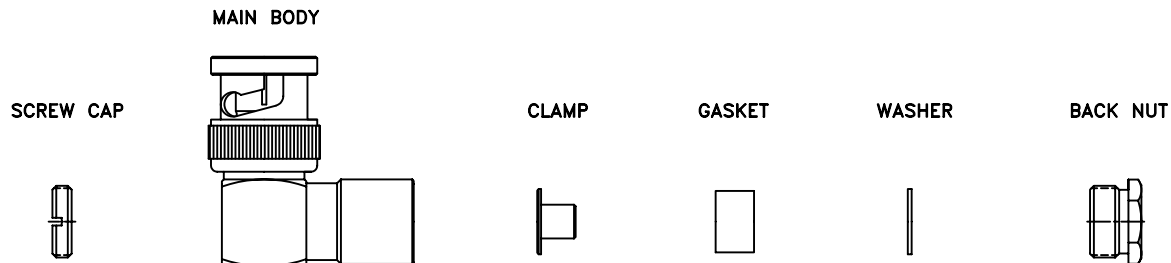

Step 1: Cut end of cable evenly. Strip cable to dimensions shown in catalog or on envelope/outline drawing. All cuts are to be clean and square. Do not nick braid or center conductor when cutting. Slide back nut, washer and gasket onto cable.

Step 2: Slide the clamp under cable braid. Push clamp back against cable jacket. Trim extra braid if needed. Slide gasket, washer and back nut close to the clamp.

Step 3: Insert cable assemble into main body. Tighten back nut while holding body stationary.

Step 4: Solder cable center conductor to pin slot inside connector. Cable center conductor should not extend past slotted connector pin. Tighten "screw cap" with flat head screw driver.

RFB-1709-D.DWG

*RF CONNECTORS*

10/03/06

7610 Miramar Road, San Diego, CA 92126-4202 - (858) 549-6340  
(800) 233-1728 - Fax (858) 549-6345 E-mail: rfi@rfindustries.com - www.rfindustries.com

JDM/CZ